



# CONTROLS (Fig. 1)

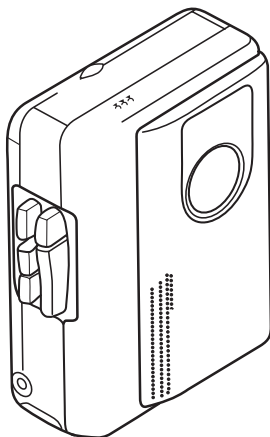 


Fig. 1

1. Battery / Operation (BATT/OPR) (M-1110C )
2. Voice Recording / Playback (VAS) (M-1110C )
3. Volume (VOLUME)
4. Microphone (MIC) (M-1110C )
5. Earphone (EAR)
6. Battery Charge Indicator


7. Cassette (M-1110C)
8. Battery (M-1110C)
9. Tape (M-1110C)
10. Record (REC)
11. Play (PLAY)
12. External DC 3V (EXT DC 3V)
13. Fast Forward/Cue (FFWD/CUE)
14. Rewind/Reverse (REW/REV)
15. Stop (STOP)
16. Pause (PAUSE)

## POWER
 
### AC adaptor

Connect the AC adaptor (Part No. 645 016 1018) to the EXT DC 3V ac (F. 2). (The battery is a 3V dc (rec. ed.).)

The external DC 3V ac (+).

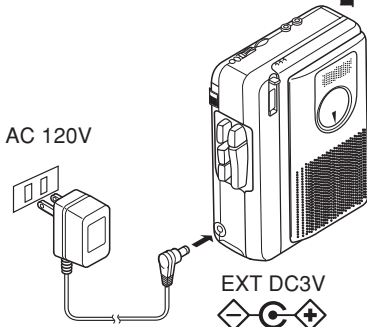

## Battery

Insert the AA battery (see Figure 3.3) into the battery compartment. If the battery is inserted incorrectly, the device will not work. The battery compartment cover will not close properly if the battery is inserted incorrectly.

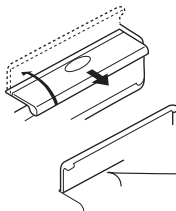 


Figure 3.3

## Battery replacement

When the BATT/OPR (M-1110C) device is low on battery, the BATT/OPR indicator will flash. To replace the battery, remove the battery cover and insert the new battery. The device will not work if the battery is inserted incorrectly. The device will not work if the battery is inserted incorrectly.

## IMPORTANT NOTE:

**SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.**

## Rechargeable battery

Insert the rechargeable battery (SANYO NBP-30B, see Figure 3.4) into the battery compartment. The battery compartment cover will not close properly if the battery is inserted incorrectly. The device will not work if the battery is inserted incorrectly. The device will not work if the battery is inserted incorrectly.



Ni-Cd



# IMPORTANT NOTE:

SPENT NICKEL-CADMIUM RECHARGEABLE BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS.

FOR DETAILED BATTERY RECYCLING INFORMATION, CONTACT THE RECHARGEABLE BATTERY RECYCLING CORPORATION AT 1-800-822-8837.

## CONNECTIONS

### External microphone (M-1110C only)

Connect the external microphone (M-1110C only) to the MIC jack on the rear of the unit. (The external microphone is not included.)

### Earphone

Connect the earphone (M-1110C only) to the EAR jack on the rear of the unit. (The earphone is not included.)

## RECORDING (Fig. 5)

NOTE: Do not use the C-120 cassette tape in the recorder.



B -

F .5

-E

1. L ad a cassette e a 9.6.  
F .6.
2. P e e e b  
e c e 000 . T e  
c e e e a e a e  
(M-1110C )
3. Se e VAS c ON  
OFF. (M-1110C )
4. P e e REC b . (T e  
PLAY b e a ed  
a e .)

**VAS ON: Voice activated re-  
cording (M-1110C only)**

 
W e a e  
ec d . W e a f a a 4 8  
ec d e ec d ( a a ce  
e e d ec d ).

Use e VOLUME c ad e c e -  
ce. If ce a e ac a ec d ,  
c ea e e. If ec d d e e  
a e dec ea e e.

NOTE: If e f fe d e a ac a e ec d-  
b a e ec ded, a a e / a d a e-  
c d bef e d c a e. (F a ec d  
e e VAS c OFF.)

**VAS OFF: Standard recording (M-1110C only)**

- Rec d c e e STOP b e ed.
5. P e e STOP b ec d .

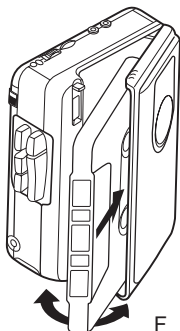

F .6

## Fast forwarding or rewinding

Press the **FFWD/CUE** or **REW/REV** button. Press the **STOP** button to stop the tape. Press the **FFWD/CUE** or **REW/REV** button again to start the tape.

## Temporarily stopping operation (all modes)

Press the **PAUSE** button. Press the **PAUSE** button again to resume operation.

## Quick reviewing and recording

When the tape is in the **REW/REV** mode (the **REC** button is lit), press the **REC** button. Release the **REW/REV** button and press the **REC** button again to start recording. Press the **REC** button again to stop recording.

## Safeguards against accidental erasure (Fig. 7)

To erase the tape, press the **ERASE** button (1). To erase the tape, press the **ERASE** button (2).

To erase the tape, press the **ERASE** button (3). To erase the tape, press the **ERASE** button (3).

**NOTE:** The **REC** button can be depressed while the tape is in the **REW/REV** mode.


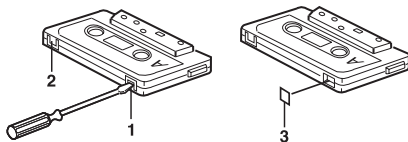 


Fig. 7

## PLAYBACK (Fig. 8)

 1. Load the cassette tape.
2. Press the PLAY button.
3. Press the STOP button to stop playback.

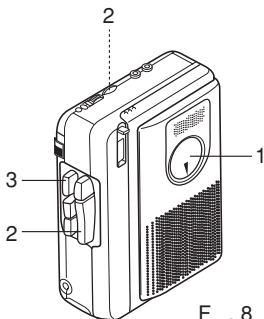


F . 8

## Cue and reviewing

 When a tape is loaded, press the FFWD/CUE or REW/REV button. Release the button to stop the tape. Press the button again to start the tape.

## MAINTENANCE

To clean the tape head, use a cleaning tape (1) or a cleaning brush (2). Insert the cleaning tape (4, 5) into the tape deck (3) and run it for 10 seconds (F . 9).

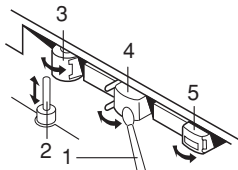

F . 9



# SANYO SERVICE PLUS LIMITED WARRANTY DICTATION PRODUCTS ONLY

## OBLIGATIONS

If the dictation product is found to be defective within the warranty period, Sanyo will, at its option, either repair or replace the product. The warranty is limited to the original retail user and does not apply to products used for any industrial, professional, or commercial purpose. The original dated bill of sale or sales slip must be submitted at the time warranty service is requested.

Note: Do not return this unit to the retail store for service.

Toll Free 1-877-999-1840

Weekdays 8:00 AM - 5:00 PM Pacific Time

**THIS WARRANTY IS VALID ONLY ON SANYO DICTATION PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA, EXCLUDING ALL U.S. TERRITORIES AND PROTECTORATES. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL RETAIL USER, AND DOES NOT APPLY TO PRODUCTS USED FOR ANY INDUSTRIAL, PROFESSIONAL, OR COMMERCIAL PURPOSE. THE ORIGINAL DATED BILL OF SALE OR SALES SLIP MUST BE SUBMITTED AT THE TIME WARRANTY SERVICE IS REQUESTED.**

The obligations and exclusions of this warranty are set forth in the Sanyo Service Plus Limited Warranty. The warranty is limited to the original retail user and does not apply to products used for any industrial, professional, or commercial purpose. The original dated bill of sale or sales slip must be submitted at the time warranty service is requested.

LABOR	PARTS
1 YEAR	1 YEAR

## EXCLUSIONS

The warranty does not cover (A) products that are damaged or defective prior to delivery, (B) products that are damaged or defective due to misuse, abuse, or neglect, or (C) products that are damaged or defective due to fire, theft, or other causes beyond the control of Sanyo.

The warranty does not cover (A) products that are damaged or defective prior to delivery, (B) products that are damaged or defective due to misuse, abuse, or neglect, or (C) products that are damaged or defective due to fire, theft, or other causes beyond the control of Sanyo.

The warranty does not cover (A) products that are damaged or defective prior to delivery, (B) products that are damaged or defective due to misuse, abuse, or neglect, or (C) products that are damaged or defective due to fire, theft, or other causes beyond the control of Sanyo.

THE DURATION OF ANY WARRANTIES WHICH MAY BE IMPLIED BY LAW (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS) IS LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL SFC BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE PERFORMANCE OF ITS OBLIGATIONS UNDER THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

For the full text of this warranty, please refer to the Sanyo Service Plus Limited Warranty. The warranty is limited to the original retail user and does not apply to products used for any industrial, professional, or commercial purpose. The original dated bill of sale or sales slip must be submitted at the time warranty service is requested.



---

**21605 Plummer Street  
Chatsworth, CA 91311**